
INSTRUCTION

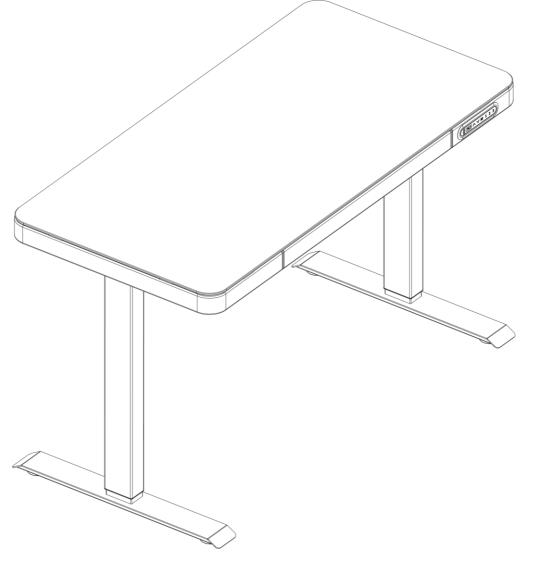




Main Components


Please check you have all the parts listed below



1 Table top Qty 1 (120*60*5.9cm)

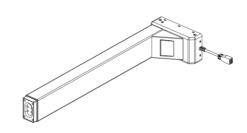

2 Leg Qty 2 (66.5*17.6*9.6cm)

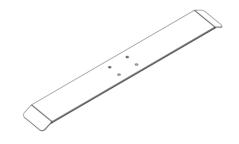

3 Foot Qty 2 (60*7.5*1.8cm)




4 Leveling Studs Qty 4

Fixings, Fittings And Tools

Please check all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly . In some case more fittings may be supplied than be required.

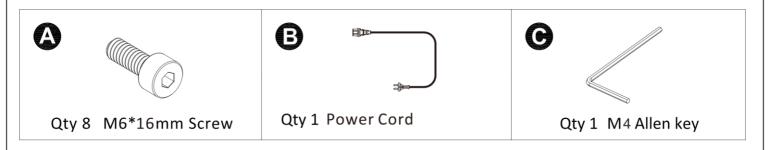



Assembly Steps


Step 1

 
Attach each foot with qty 4 Screws(Part#A)





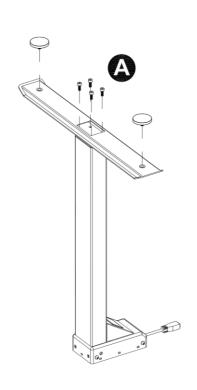

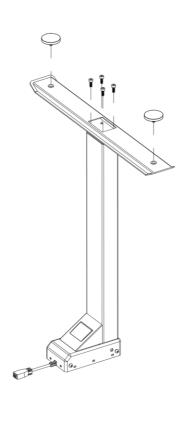

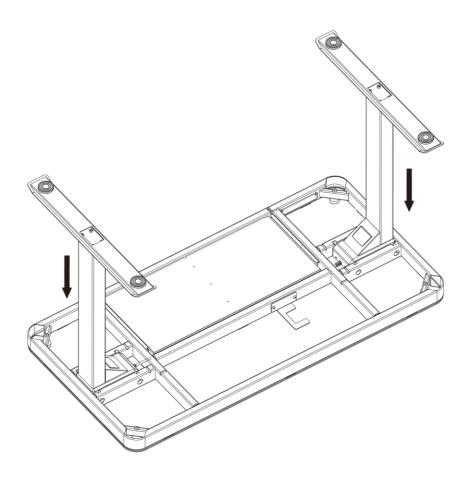


Attach two legs into the table top(Part#1)






 M6*12mm Screw Qty 8 (Pre-installed Screws)





M4 Allen key Qty 1

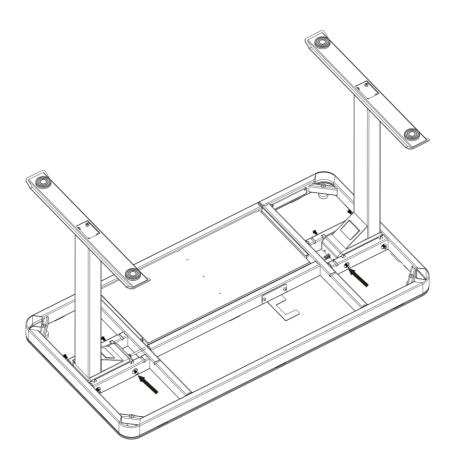


Tighten 8 Pre-installed Screws

Step 4 A ach control box &connect cables Oty 1 Power Cord

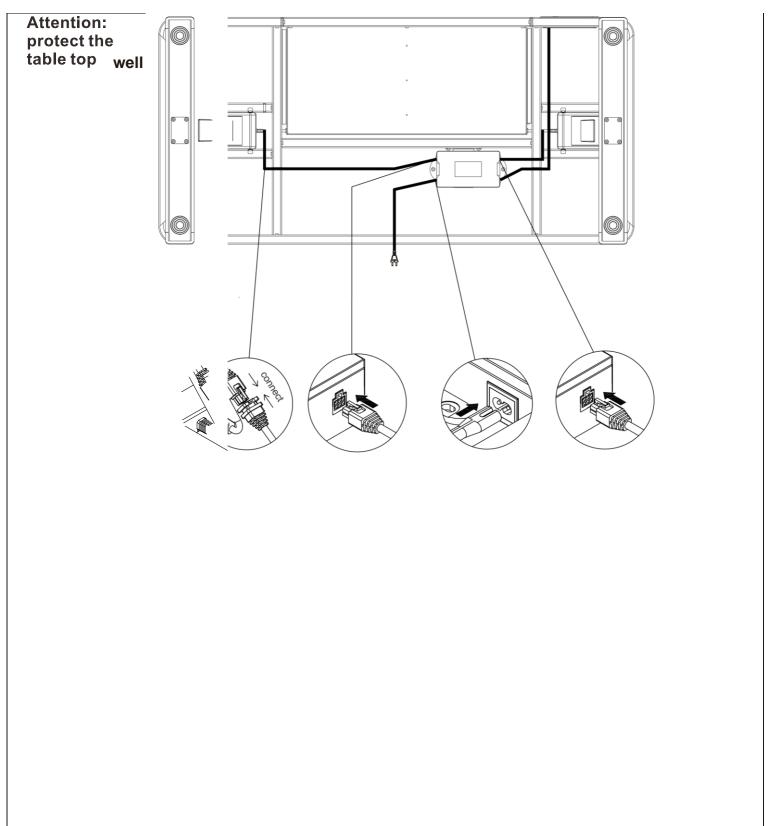

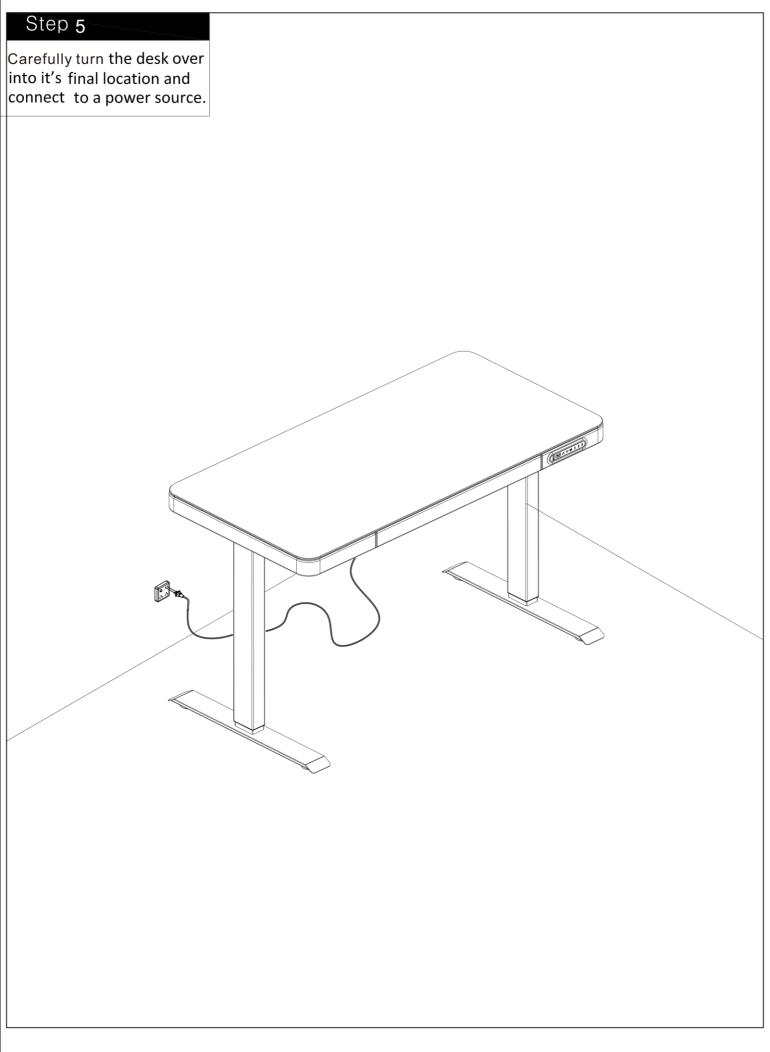

Ready To Use

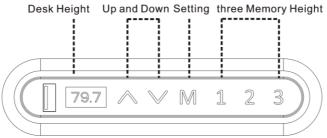

Before Plugging the table into the outlet, make sure that - The lift columns are level and set at the lowest position.

- All the screws are tightened, to avoid the desk making noise and wobbling.

 
Activate the desk by following the next steps.

- -Please press button down and hold for 10-15 seconds until it stutters and beeps.
- -Release the button, then your desk is ready to use.

Operation Guide

1. Memory desired height

- -Press button "M", display show "S-" with flash.
- -Press number and set desired position.



- -Press button up and down at same time for 5 seconds, display "LOC"
- -All single button will be inactive and table will be unable to move.
- -Pressing button up and down together will unlock the keypad and release the LOC



79.7

3. Reset the table

When display show Error code or RST, Please reset the table.

- -Unplug the power cord from the control box. -Unplug the cable that links the keypad to the control box.
 - -Wait 30 minutes and plug all the cables in again.
 - -Do the reset: please press button down and hold

10-15 seconds until it stutters and beeps.



Press by holding 10-15 seconds for

If the keypad displays HOT, please unplug and replug and let it cool off for a couple of minutes before proceeding again.